



CENTRIFUGE

On other systems, the centrifuge is the most common bottleneck

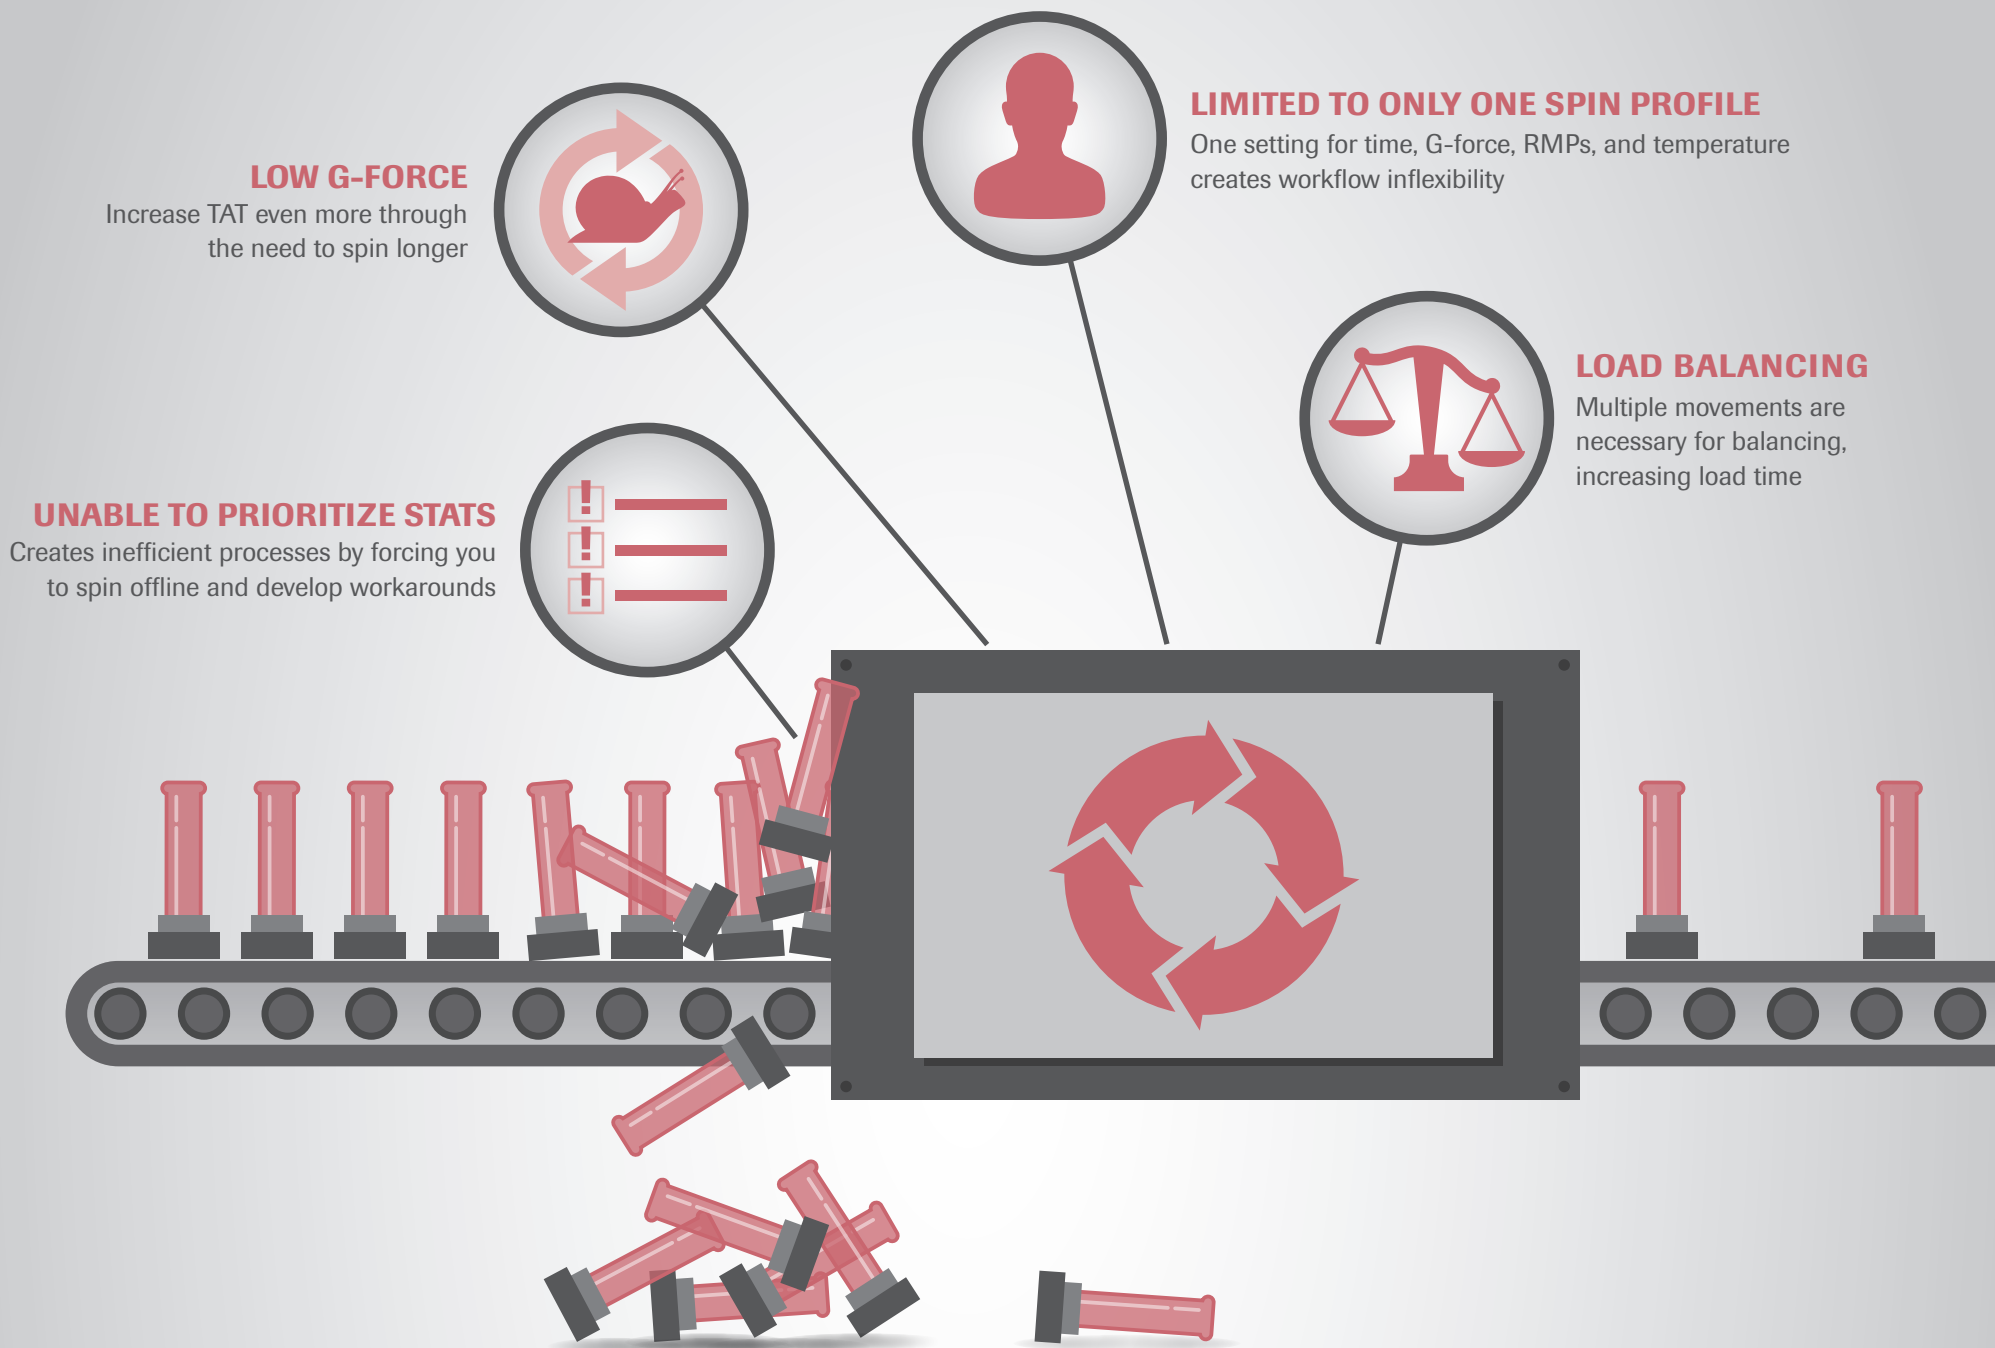

The **cobas** 8100 automated workflow series opens the bottleneck with a superior centrifuge

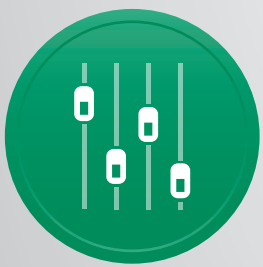


SELF-BALANCING

Saves significant time in loading and unloading



HIGH-POWERED

Increased G-force potentially lowers spin time requirements

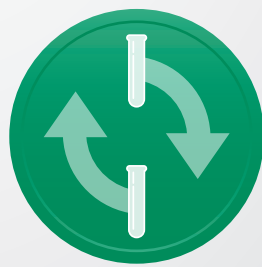

MULTIPLE SPIN PROFILES

Efficiently integrate different sample types



PRIORITIZES STATS

STAT samples are first-on, first-off to reduce TAT



PREVENT BOTTLENECKS AND SAVE TIME WITH A CENTRIFUGE THAT'S BUILT FOR EFFICIENCY